

M20P SA RIFLE

USER'S MANUAL



WARNING: READ THE INSTRUCTIONS AND SAFETY PRECAUTIONS IN THIS MANUAL CAREFULLY BEFORE USING THE FIREARM.



ROCK ISLAND ARMORY

USER'S MANUAL M20P SA RIFLE

SAFETY, INSTRUCTION AND PARTS MANUAL



As a responsible owner of this firearm, you must read the instructions and warnings in this manual carefully. Before using this firearm, make sure you understand thoroughly the contents of this manual.

This manual must always be in the firearm's carrying case whenever the owner/user brings it or when it transfers ownership. A copy of this manual is available upon request from:

*ARMSCOR PRECISION INTERNATIONAL
150 N Smart Way, Pahrump NV 89060
E-mail: support@armscor.com*

TABLE OF CONTENTS

1 Statement of Liability

1 State-By-State Warnings

2 Safety Precautions

HEALTH & SAFETY

3 Tech Specs

4 Basic Parts

5 Exploded Views

ABOUT THE FIREARM

Basic Disassembly & Assembly 6


Storage and Transportation 7

Ordering Parts 8

Warranty 9

Notes 10

MAINTENANCE

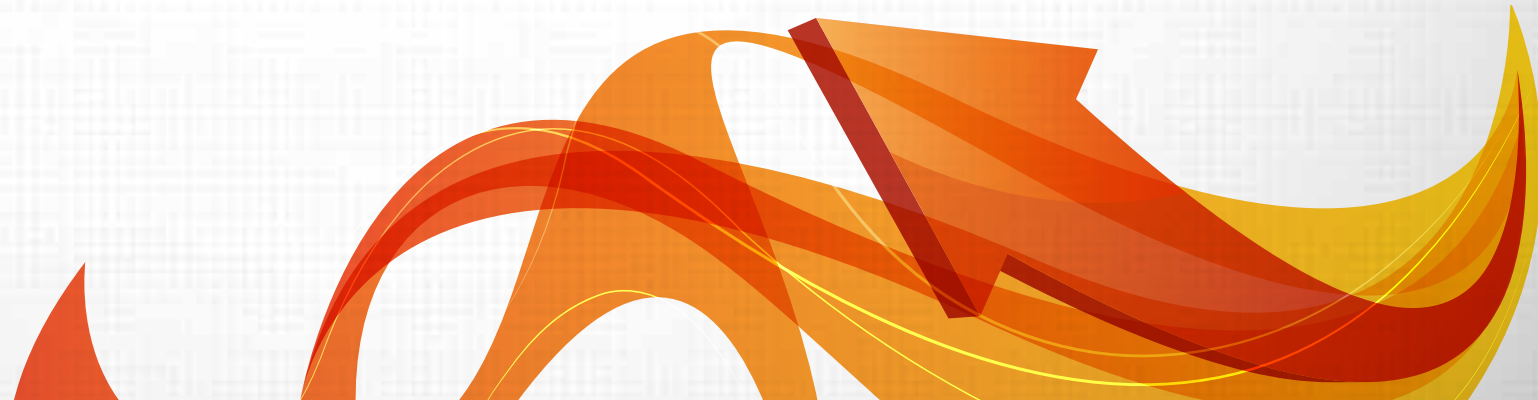

STATEMENT OF LIABILITY

This rifle is classified as a firearm or dangerous weapon. It is expressly understood that we assume no liability for its resale or unsafe handling under local laws and regulations. Armscor assumes no responsibility for physical injury or property damage resulting from either intentional or accidental discharge, or for the function of the firearm subjected to influence beyond their control. Armscor will honor no claims which may result from careless handling, unauthorized adjustments, defective or improper ammunition, corrosion or neglect. Examine your firearm carefully at the time of purchase. It should be forwarded immediately to the factory or its sales agent if any adjustment of any kind of required.

State-By-State Warnings



CALIFORNIA STATE WARNING

CHILDREN ARE ATTRACTED TO AND CAN OPERATE FIREARMS THAT CAN CAUSE SEVERE INJURIES OR DEATH. PREVENT CHILD ACCESS BY ALWAYS KEEPING FIREARMS LOCKED AWAY AND UNLOADED WHEN NOT IN USE. IF YOU KEEP A LOADED FIREARM WHERE A CHILD OBTAINS AND IMPROPERLY USES IT, YOU MAY BE FINED OR SENT TO PRISON. IT IS UNLAWFUL TO USE A MAGAZINE WITH A CAPACITY OVER 10 ROUNDS.



MASSACHUSETTS STATE WARNING

IT IS UNLAWFUL TO CARRY ANY MAGAZINE OR BELT WHICH HOLDS MORE THAN TEN ROUNDS, UNLESS AUTHORITY IS GRANTED BY THE BOSTON POLICE COMMISSIONER. IT IS UNLAWFUL TO STORE OR KEEP A FIREARM, RIFLE, SHOTGUN OR MACHINE GUN IN ANY PLACE UNLESS THAT WEAPON IS EQUIPPED WITH A TAMPER RESISTANT SAFETY DEVICE OR IS STORED OR KEPT IN A SECURELY LOCKED CONTAINER.



NEW YORK STATE WARNING

IT IS UNLAWFUL TO CARRY ANY MAGAZINE OR BELT WHICH HOLDS MORE THAN SEVEN ROUNDS, UNLESS AUTHORITY IS GRANTED BY THE STATE OF NEW YORK. THE USE OF A LOCKING DEVICE OR SAFETY LOCK IS ONLY ONE ASPECT OF RESPONSIBLE FIREARMS STORAGE FOR INCREASED SAFETY, FIREARMS SHOULD BE STORED UNLOADED AND LOCKED IN A LOCATION THAT IS BOTH SEPARATED FROM THEIR AMMUNITION AND INACCESSIBLE TO CHILDREN AND OTHER UNAUTHORIZED PERSONS.

02 | SAFETY PRECAUTIONS

Safety must be the first and constant consideration of every person who handles firearms and ammunition. The person with a firearm in his possession has an important responsibility. He/she must know how to use his/her firearm safely:

1. Always keep the firearm holstered except when drawn for a definite purpose.
2. Always check the firearm for live ammunition when picked up, drawn from the holster, handed to, or received from another person.
3. Never point the firearm at anything you do not intend to shoot.
4. Never cock the hammer of the firearm unless you are ready to immediately shoot it. Do not even insert your finger in the trigger guard until you are ready to shoot.
5. Avoid dry firing even with dummy cartridges, unless the same is performed on a regular target range or at a known inanimate target.
6. When holding the firearm that is ready to fire, be absolutely certain that it is not pointed at any part of your body or at any person within your immediate vicinity.
7. Beware of obstructions in barrel. If, when firing, a weak or peculiar report is heard, cease firing and inspect the barrel for an obstruction. Remove magazine then check to insure there is no obstruction in barrel or chamber.
8. When a misfire or a "dud" is experienced keep the rifle pointed at the target for at least ten seconds before inspecting the firearm. A delayed firing may occur.
9. Remove magazine and ensure chamber and barrel are free of foreign objects.
10. When possible, wear shooting glasses and hearing protectors when firing.
11. Do not shoot at a hard surface, or water for the bullet can glance off and travel in unpredictable directions with considerable velocity.
12. Avoid drinking alcoholic beverages when handling the firearm.

WARNING:

DO NOT ATTEMPT TO USE ANY FIREARM WITHOUT HAVING A COMPLETE UNDERSTANDING OF ITS PARTICULAR CHARACTERISTICS AND SAFE USE.

WARNING:

YOU SHOULD NEVER DEPEND ON A SAFETY MECHANISM OR ANY OTHER MECHANICAL DEVICE TO JUSTIFY CARELESS AND IMPROPER HANDLING.

WARNING:

THIS FIREARM WAS MANUFACTURED TO PERFORM PROPERLY WITH THE ORIGINAL PARTS AS DESIGNED. PLEASE MAKE SURE ANY PARTS YOU BUY ARE INSTALLED CORRECTLY AND THAT NEITHER REPLACEMENTS NOR ORIGINALS ARE ALTERED OR CHANGED. PUTTING A FIREARM TOGETHER INCORRECTLY OR WITH MODIFIED PARTS CAN RESULT IN DAMAGED FIREARM, DANGER, AND INJURY OR DEATH. ANY MODIFICATIONS TO FIREARM WILL VOID FACTORY WARRANTY.

03 | TECH SPECS

Model	M20P
Caliber	.22 LR
Action	Semi-auto, Recoil Operated
Magazine Capacity	10 / 15 Rounds
Barrel	Straight tapered
Barrel Length	533mm / 21in
Overall Length	1042mm / 41in
Overall Width	51mm / 2in
Overall Height	213mm / 8.38in
Front Sight	Hooded Bead Ramp
Rear Sight	Leaf Type
Trigger Pull	1.81 - 2.72kgs (4.0 - 6.0lbs)
Length of Pull	343 - 356mm (13.5 - 14in)
Drop at Heel	79 - 89mm (3.16 - 3.5in)
Drop at Comb	41 - 44mm (1.63 - 1.75in)
Weight, Empty	2.95kgs (6.5lbs)
Finish	Parkerized
Safety	Positive Thumb Operated
Stock	Natural finish Philippine wood , Monte Carlo Style With Plastic Butt Pad
Rifling, Twist	Right hand, 1 turn in 400mm (16")

CALIBER



Mag Code: 55289



.22LR HVHP

.22LR HVHP BALLISTICS				
CALIBER	BULLET		VELOCITY, fps	ENERGY, ft-lbs
	Weight, grains	Style	Muzzle	Muzzle
.22LR HVHP	36	HOLLOW	1,247	130

04 | BASIC PARTS

M20P SA RIFLE BASIC PARTS

A. BARREL-RECEIVER ASSEMBLY

PART NAME	PART NUMBER
Barrel Receiver Cross Pin	2001
Barrel	2002
Barrel Take Down Stud	2003
Barrel Take Down Screw	2004
Barrel Take Down Screw Washer	2005
Ejector	2006
Front Sight Hood	2007
Front Sight Ramp	2008
Front Sight Screw	2009
Rear Sight Elevator	2010
Rear Sight Leaf	2011
R. S. L Leaf Blank Insert (Not Shown)	2012
Flash Deflector	2013
Flash Deflector Screw	2014
Receiver	2015
Receiver Cap	2016
Receiver Cap Lock Screw	2017

B. BOLT ASSEMBLY

PART NAME	PART NUMBER
Bolt	2018
Bolt Operating Handle	2019
Bolt Operating Stud	2020
Bolt Handle Locating Bearing	2021
Bolt Handle Locating Spring	2022
Extractor	2023
Extractor Plunger	2024
Extractor Spring	2025
Firing Pin	2026
Firing Pin Spring	2027
Firing Pin Spring Guide Head & Stem	2028
Firing Pin Spring Guide Head Insert	2028A
Recoil Spring	2029
Recoil Spring Guide Sleeve	2030
Recoil Spring Retainer Sleeve	2031

C. TRIGGER HOUSING ASSEMBLY

PART NAME	PART NUMBER
Magazine Catch	2032
Magazine Catch Button	2033
Magazine Catch Pivot Pin	2034
Magazine Catch Stop pin	2035
Magazine Catch Spring	2036
Safety Latch	2037
Safety Latch Button	2038
Safety Latch Bearing	2039
Safety Latch Spring	2040
Safety Latch Screw	2041
Sear	2042
Sear Pivot	2043
Sear Stop Pin	2044
Sear Spring	2045
Sear Spring Pin	2046
Trigger	2047
Trigger Pivot Pin	2048
Trigger Stop Pin	2049
Trigger Spring	2050
Trigger Spring Follower	2051
Rebound Lever	2052
Rebound Lever Pivot Pin	2053
Rebound Lever Spring	2054
Rebound Lever Spring Bearing	2055
Trigger Housing	2056
T. H. Hold Down Screw (Front)	2057
T. H. Hold Down Screw Washer (Front)	2057A
T. H. Hold Down Screw (Rear)	2058
T. H. Hold Down Screw Washer (Rear)	2058A

D. MAGAZINE BOX ASSEMBLY


PART NAME	PART NUMBER
Magazine Box	2059
Magazine Box Inner Strip	2060
Magazine Spring	2061
Magazine Spring Retainer	2062
Magazine Spring Retainer Pin	2063
Magazine Follower	2064

E. GUNSTOCK ASSEMBLY

PART NAME	PART NUMBER
Butt Pad (Plastic)	2065
Butt Pad Retainer Screw	2067
Gunstock (Plain)	2072
Trigger Guard	2074
Trigger Guard Screw (Front)	2075
Trigger Guard Screw (Rear)	2076

05 | EXPLODED VIEWS

M20P SA RIFLE

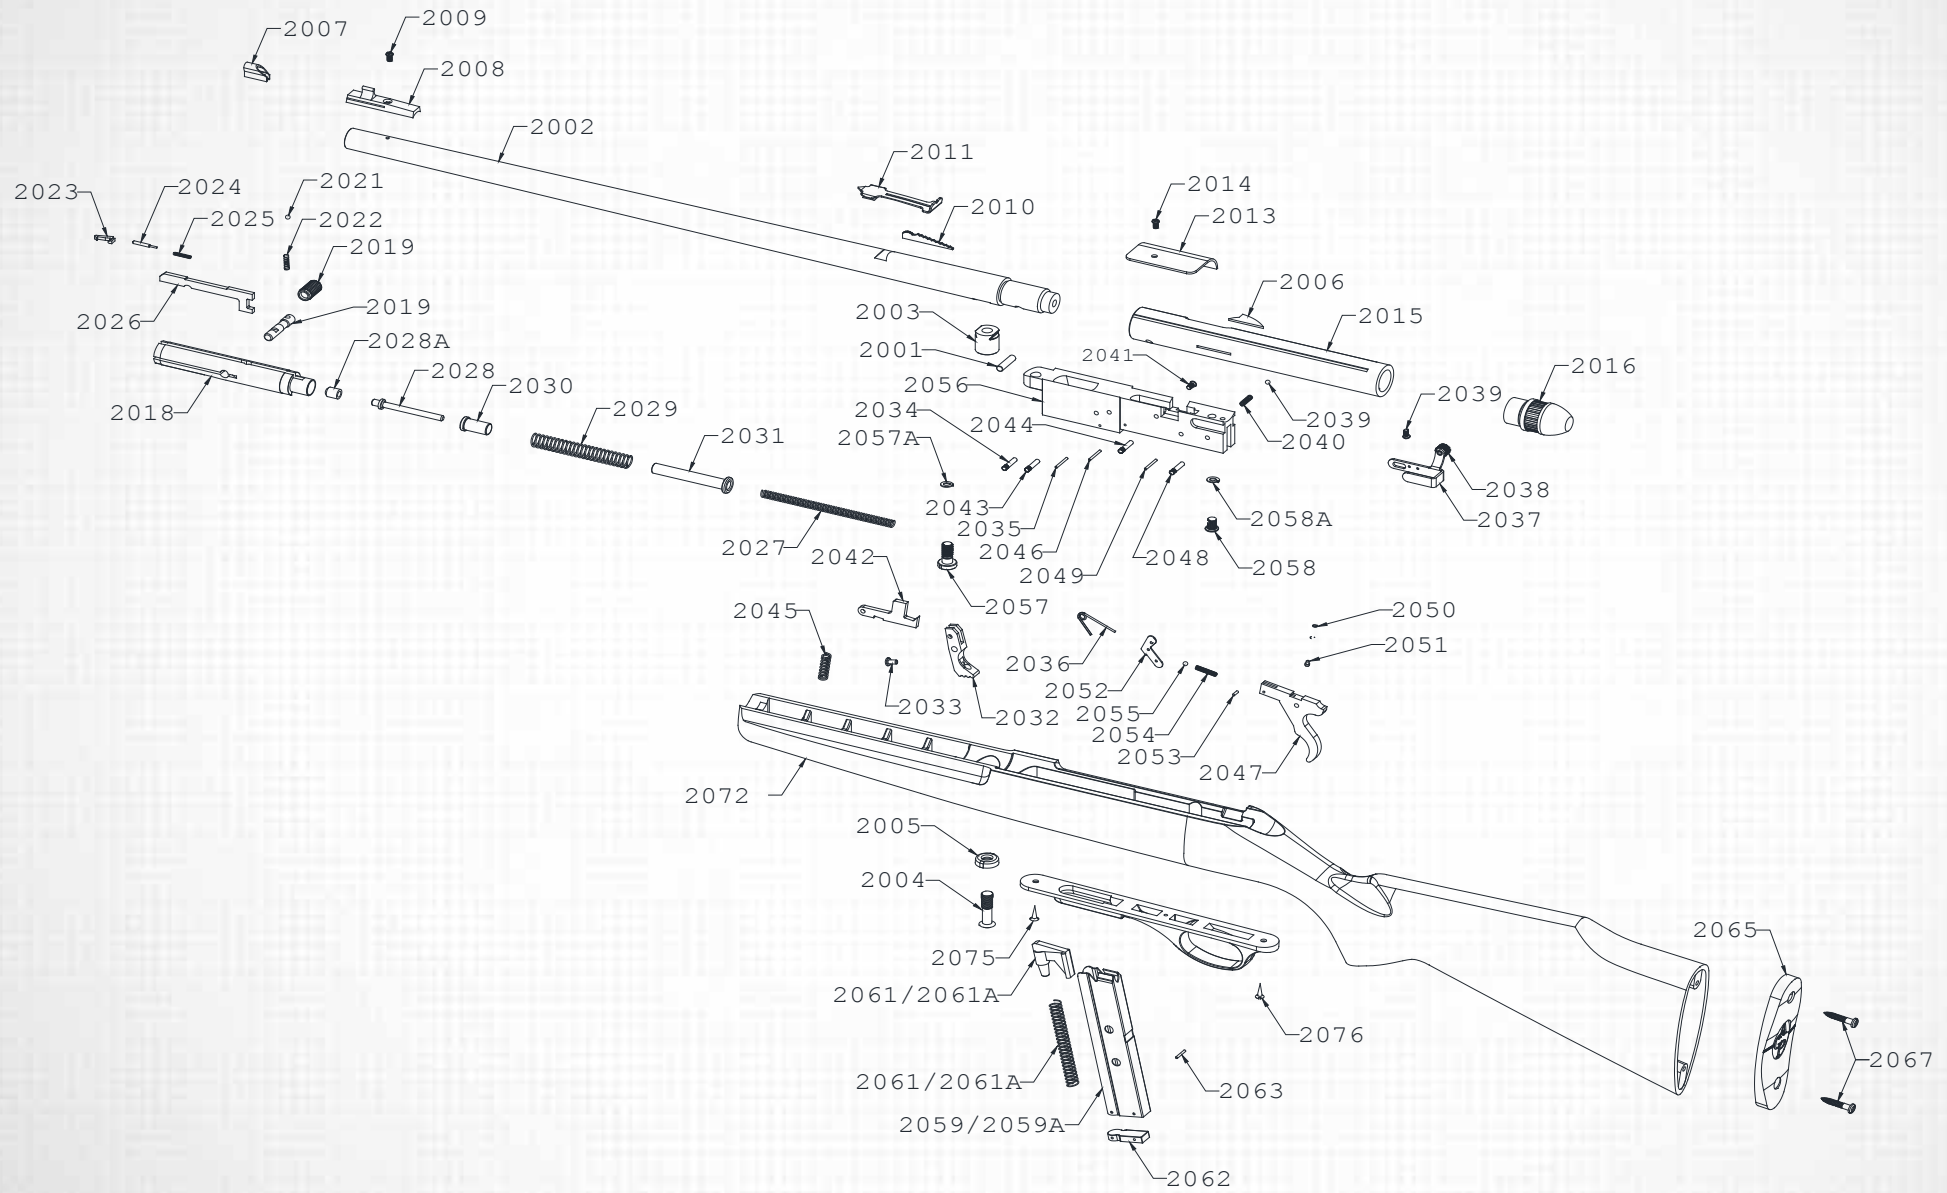

06 | BASIC DISASSEMBLY & ASSEMBLY

A. TAKEDOWN

1. Remove the magazine by depressing the magazine catch.
2. Loosen barrel takedown screw and detach the barrel-receiver assembly from the gunstock.

B. TRIGGER GROUP

1. Remove the trigger by punching out trigger stop pin and pivot pin.
2. Remove the trigger spring and spring follower at the rear end of the housing.
3. Loosen the rear and front (trigger) housing hold down screws to disengage the housing from the receiver.

CAUTION:

STEP NO. 3 IS NOT RECOMMENDED UNLESS NECESSARY. IF IT COULD NOT BE AVOIDED, MAKE SURE TO APPLY LOCTITE OR EPOXY GLUE ON REAR SCREW THREADS WHEN REATTACHING THE HOUSING TO THE RECEIVER.

C. BOLT DISASSEMBLY

1. Loosen the receiver cap lock screw and unscrew the receiver cap. Be careful as spring inside are under compression.
2. Pull out the unit assembly (recoil spring, recoil spring retainer and guide sleeve, firing pin spring & firing pin spring guide head and stem). Keep all of this in order together with the receiver cap to avoid confusion in reassembly.
3. With muzzle pointing in an upward direction retract bolt handle fully to the rear end of the receiver slot.
4. Push firing pin forward so as to align its tail end approximately even with the receiver cap lock screw. (Firing pin is visible and is even with the rear of the bolt).
5. Pull out bolt handle and operating stud and remove bolt from the receiver.

CAUTION:


THE SAFETY IN YOUR SEMI-AUTO RIFLES IS CORRECTLY DESIGNED, FITTED AND TESTED. HOWEVER ANY MECHANICAL DEVICE CAN FAIL. NEVER POINT AT ANYTHING BUT A SAFE TARGET AND NEVER RELY UPON THE SAFETY TO JUSTIFY CARELESS HANDLING. USE HIGH VELOCITY .22 CALIBER LONG RIFLE CARTRIDGES ONLY. WHEN LOADING, PULL BOLT HANDLE REAR WARD AND ALLOW IT TO SNAP FORWARD SHARPLY. BREECH AREA AND MAGAZINE SHOULD BE CLEANED THOROUGHLY.

A. BOLT ASSEMBLY

1. Place firing pin at the rear end of firing pin slot of the bolt.
 2. Push bolt and firing pin into the receiver and align them with respect to the receiver slot so that the bolt handle can be inserted through it past the bolt and firing pin stud clearance. Slide bolt forward with bolt handle and stud already inserted into it until it stops against the rebound lever.
 3. While holding the trigger back with one hand, use a nail or any pointed object to trip the rebound lever by moving it to the rear away from the sear in the direction indicated by an arrow on the rebound lever (See small sketch engraved on the trigger housing).
 4. Push bolt handle forward sliding the bolt over the rebound lever. Release the trigger.
 5. Insert recoil spring guide sleeve and retainer sleeve in opposite ends of the recoil spring.
- NOTE: Steps no. 5, 6, & 7 can be bypassed as long as you followed the instruction in step C-2 for bolt disassembly keeping the components together and in order.
6. Insert firing pin spring guide into the firing pin spring.
 7. Insert assembly no. 6, spring end first, into the recoil spring through the guide sleeve (shorter sleeve).
 8. Insert the entire unit inside the receiver, shorter sleeve resting against the bolt. Place the receiver cap at the rear end of the unit assembly and compress the springs carefully to return receiver cap into its original position. Tighten the receiver cap lock screw.
 9. Pull bolt handle back and forth several times to check the action of bolt and trigger assembly.

B. TRIGGER ASSEMBLY

1. With gun in an upside down position, Insert trigger spring follower into the trigger spring and mount it into the spring hole.
2. Insert the trigger, locating the catch of the rebound lever with the rear catch.
3. Insert the trigger stop pin and pivot pin into their respective holes.
4. Squeeze trigger several times to check the action of the trigger spring. (Pull bolt handle back and forth several times to check if trigger will release cocked firing pin spring).

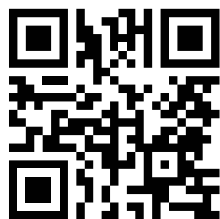

SCAN QR

[SEE FULL VIDEO TUTORIALS ON OUR WEBSITE](#)

STORAGE AND TRANSPORTATION

When storing the firearm and ammunition, store in separate locations, store ammo in a cool, dry location.

When storing the gun for a prolonged period of time, It is necessary to oil it heavily with an acid-free lubricant. The external parts must be coated with an anti-rust oil or grease to prevent moisture causing the parts to rust and malfunction. Before usage, the rifle must be cleaned and wiped dry again as discussed previously.

WARNING:

CHILDREN ARE ATTRACTED TO AND CAN OPERATE FIREARMS THAT CAN CAUSE SEVERE INJURIES OR DEATH. PREVENT CHILD ACCESS BY ALWAYS KEEPING FIREARMS LOCKED AWAY AND UNLOADED WHEN NOT IN USE. IF YOU KEEP A LOADED FIREARM WHERE A CHILD OBTAINS AND IMPROPERLY USES IT, YOU MAY BE FINED OR SENT TO PRISON.

WARNING:

THE FIREARM SHOULD BE RE-STORED IN ROOMS WITH A DRY ATMOSPHERE AND WITH THE LEAST HUMIDITY. IT SHOULD NOT BE STORED ENCASED IN LEATHER OR ANYTHING THAT WILL ATTRACT AND HOLD MOISTURE, CAUSING IT TO RUST.

ORDERING PARTS

Visit RIA website to browse, learn more about and purchase parts and ammunition for all of your Rock Island Armory products.

 www.advancedtactical.com



WARRANTY REGISTRATION

Armcor's warranty covers its firearms and parts. We offer limited lifetime warranty on our products for their intended purpose. As with any product, abuse, gunsmithing by an unqualified person and normal wear and tear are excluded. Additionally, if the firearm was modified and/or repaired by an unqualified gunsmith without permission from Armcor, then the warranty will be void. If warranty work should be required, return the firearm to the address listed below. There is no refund for the shipping cost. Gunsmithing services are available by registered Armcor Gunsmithers. Please email the address below.

To register your firearm, please go to www.rockislandarmory.com/support-center/warranty/ and complete online warranty form. In comments section, write warranty registration and press submit. You can also go to www.rockislandarmory.com and press warranty section at the bottom.

For more information on warranty, visit www.rockislandarmory.com, or email support@armcor.com

Armcor Precision International
150 North Smart Way
Pahrump, NV 89060
Email: support@armcor.com

IMPORTANT WARRANTY INFORMATION

Our Rock Island Armory rifles are warranted to function only with Factory High Velocity Brass Cased Ammo and the Original Factory Magazine. Use of Handloads is not covered in Warranty of Repair for the function of the Firearm.

DUE TO THE FIT AND TIGHTNESS OF FIREARM, RIA RECOMMENDS A BREAK-IN PERIOD OF 500 ROUNDS.

THIS IS HOW YOU VOID YOUR WARRANTY

- * Refinishing your RIA firearm
- * Misuse, Mishandling, Dropping your RIA Firearm
- * Firing Remanufactured or Reloaded Ammunition
- * Not properly reassembling your RIA Firearm resulting in damage, ie reverse plugs!
- * Any addition of after market parts
- * Unauthorized repairs done by any other than Rock Island Armory

LIMITS ON WARRANTY (will not cover)

- * Finish, Holster wear, Scratches, Chemical damage
- * After Market Magazines
- * Damage to Factory Magazines
- * Sights not installed by Rock Island Armory
- * Recoil Springs

WE RESERVE THE RIGHT TO CHARGE FOR LABOR, PARTS AND SHIPPING TO RETURN YOUR RIA FIREARM BACK TO FACTORY SPECIFICATIONS IF IT HAS BEEN ALTERED.

NOTES



WWW.ROCKISLANDARMORY.COM

